
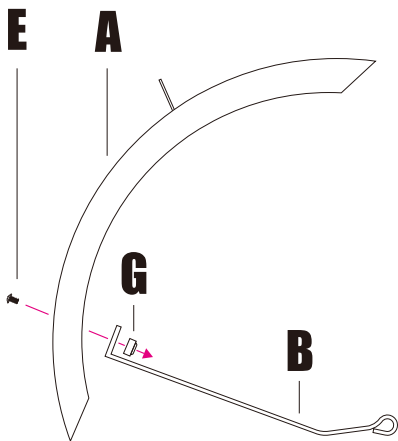


29669 FENDER ASSEMBLY INSTRUCTIONS FOR X-3 AX


Parts List

A	Front Fender	1 PC
B	Front Fender Strut	1 PC
C	Rear Fender	2 PCS
D	Rear Fender Strut	4 PCS
E	M5x10mm Bolt	7 PCS
F	M5x16mm Bolt	8 PCS
G	M5 Nylock nut	13 PCS
H	M6x45mm bolt	1 PC
I	M6 Nylock nut	1 PC

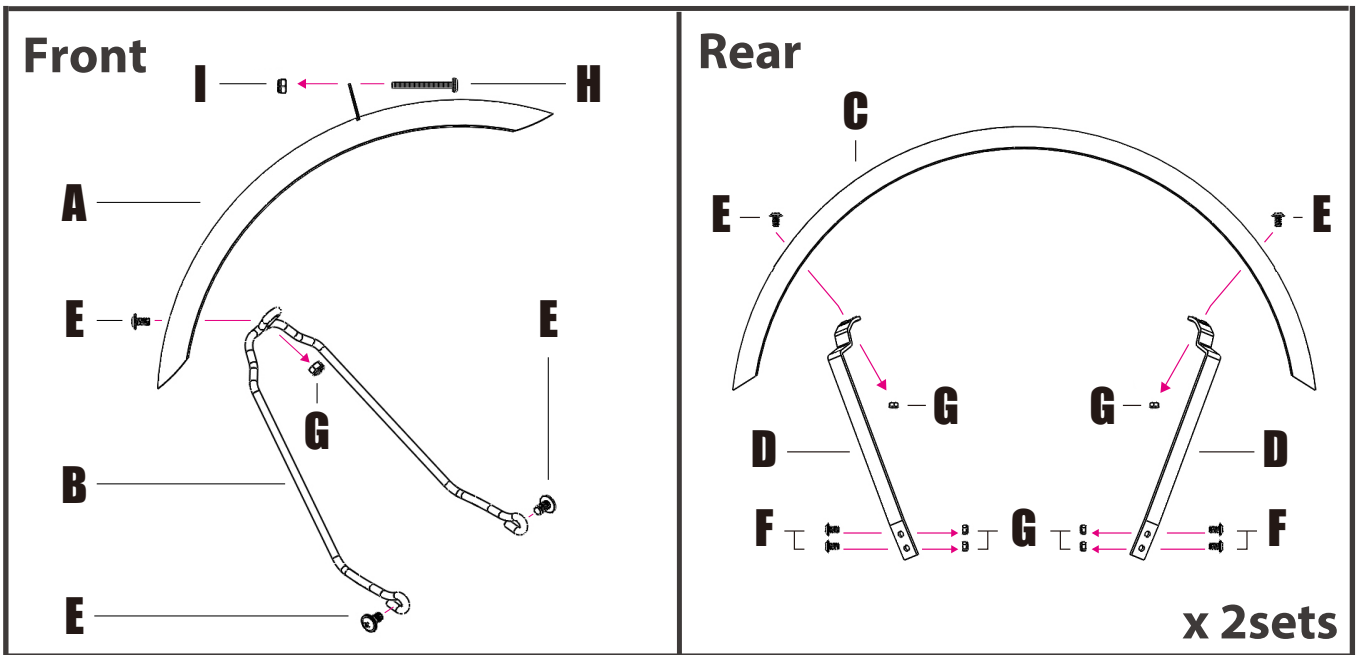

STEP 1.


Install fender strut (B) onto the front fender (A) tighten bolt (E) and nut (G).

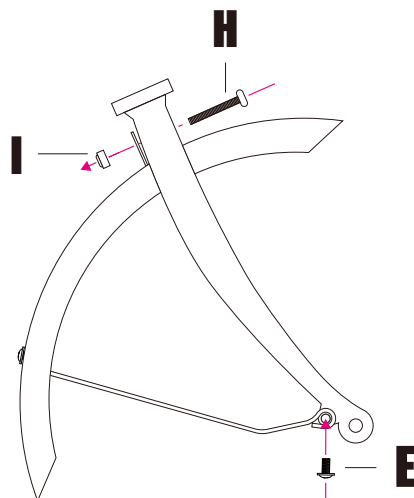

STEP 2.


Insert the front fender (A) into the fork and using the provided hardware (H & I) tighten.

Install fender strut (B) onto the fork dropout and secure with screw (E).

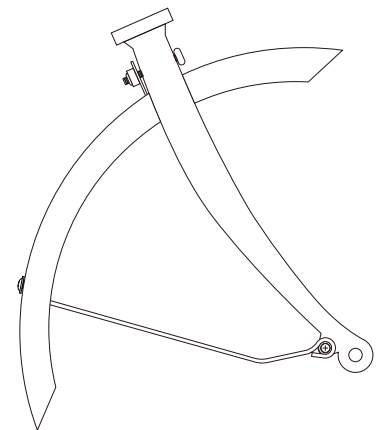


STEP 3.

Finish assembly. Make sure there is no fender interference when the tire rotating.

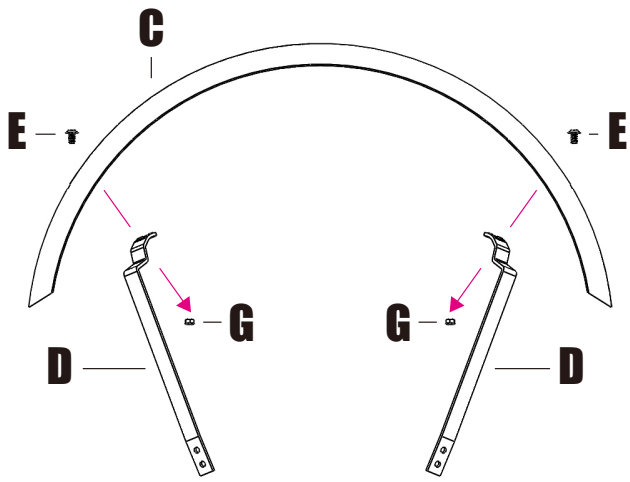

STEP 4.


Install fender strut (D) onto the rear fender (C) tighten bolt (E) and nut (G).

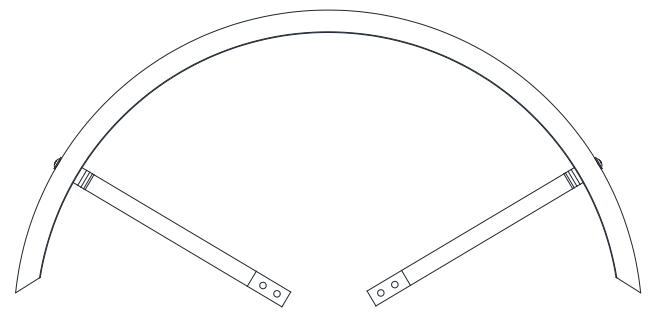

x 2sets

STEP 5.


Repeat for other side and make sure the fender struts are fitting tighten.

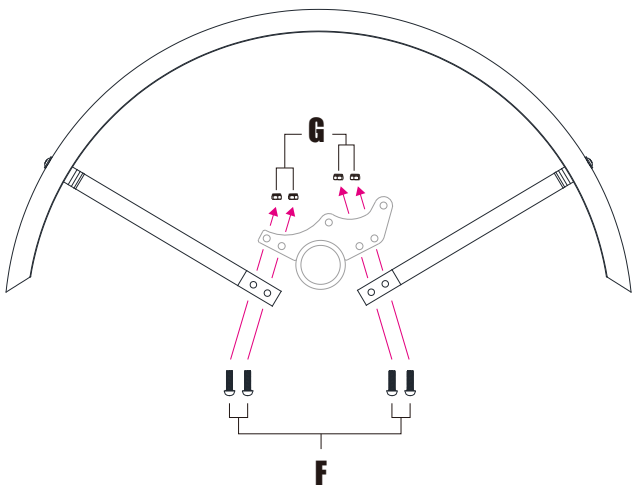

STEP 6.

Install the rear fender onto rear unit frame dropout and secure with bolts (F) and nuts (G).

Make same procedure on both left and right sides.

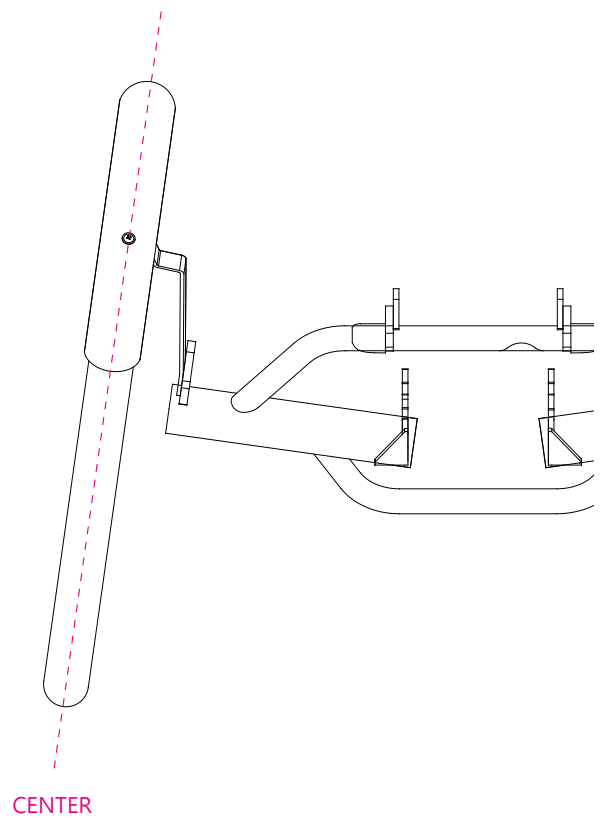

STEP 7.

Finish assembly on both sides. Adjust the fenders to be in the center position, as shown.